





Jøtul F 400 ECO HE+

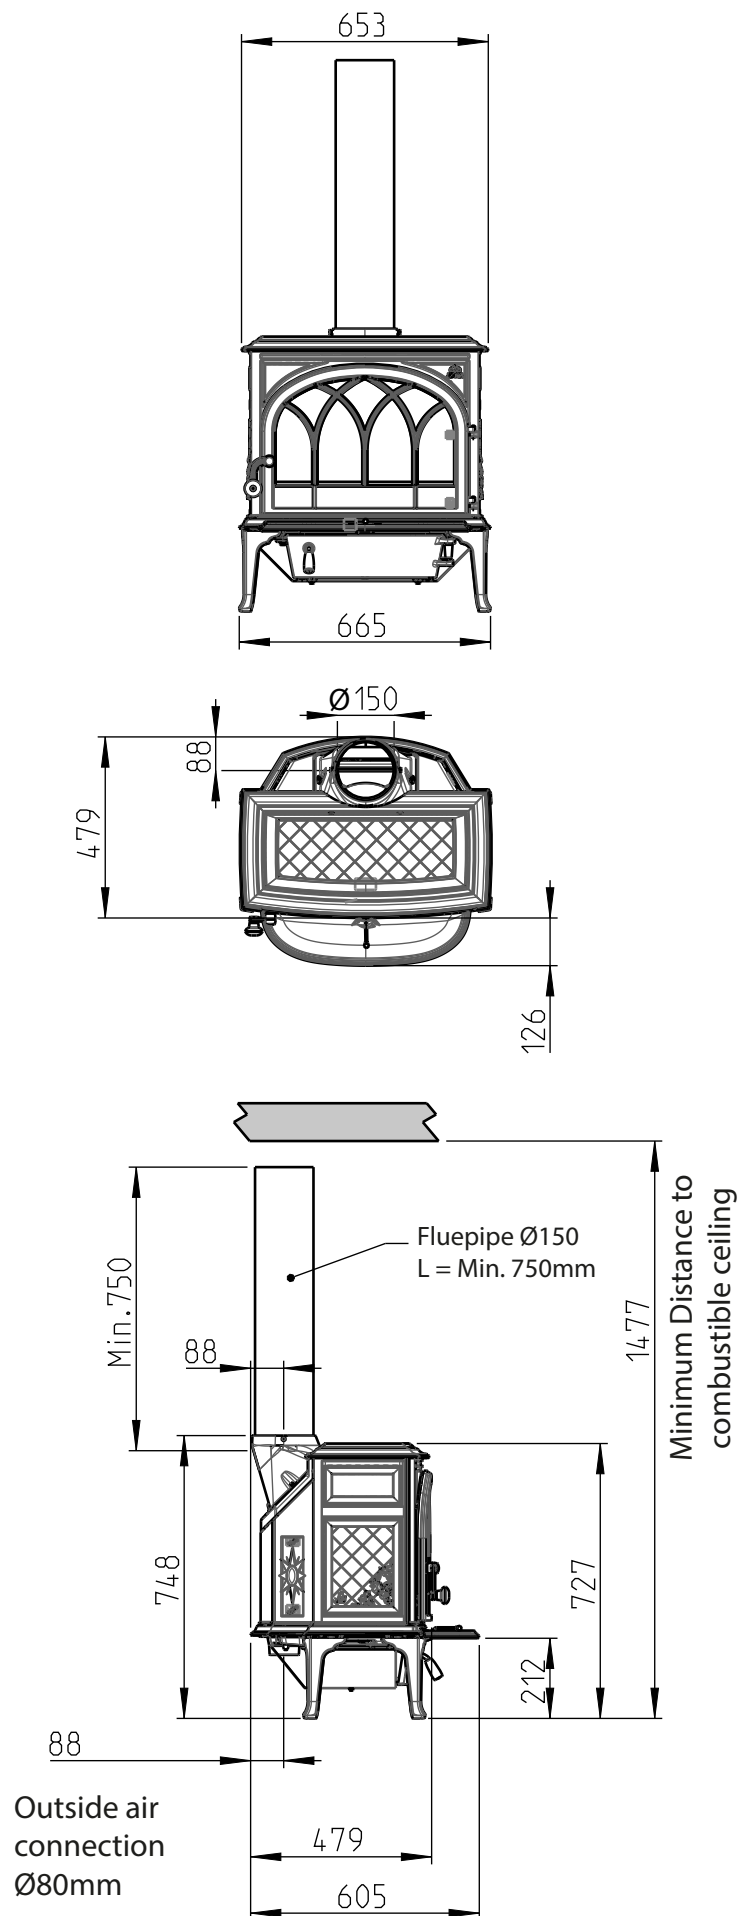

Minimum distance to combustible wall

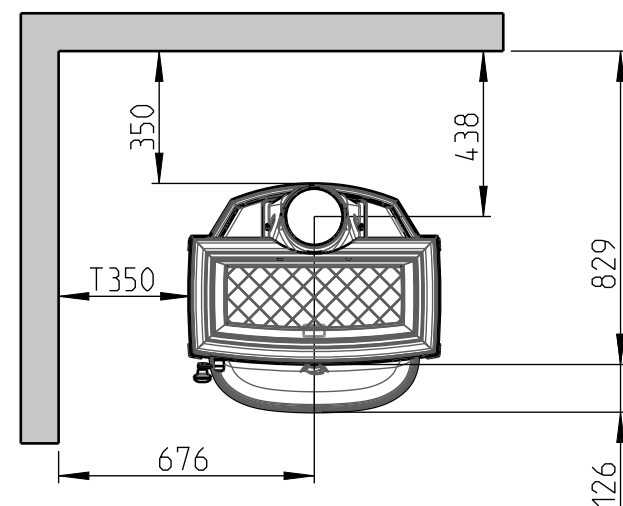

T = Measured from the top plate

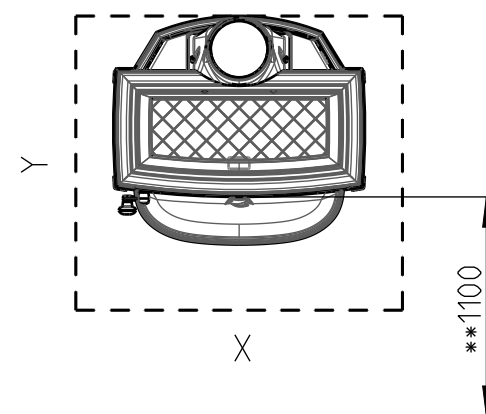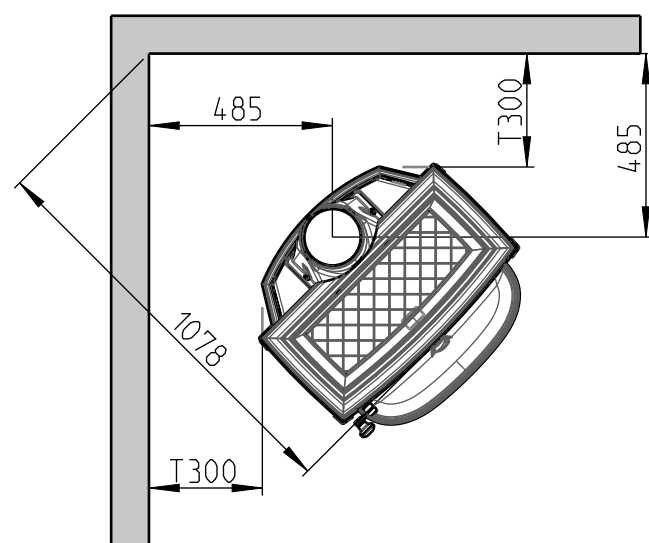


Min. measurments floor plate

X/Y = According to national laws and regulations






** minimum distance to furniture/combustible material

Min. distance to combustible wall protected by firewall

External firewall

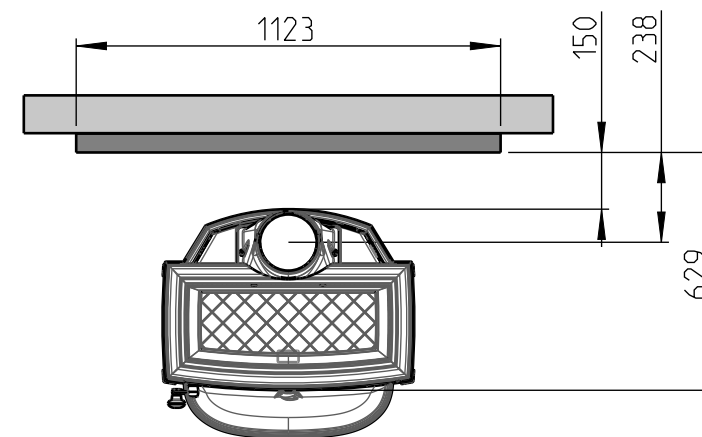

Integrated firewall

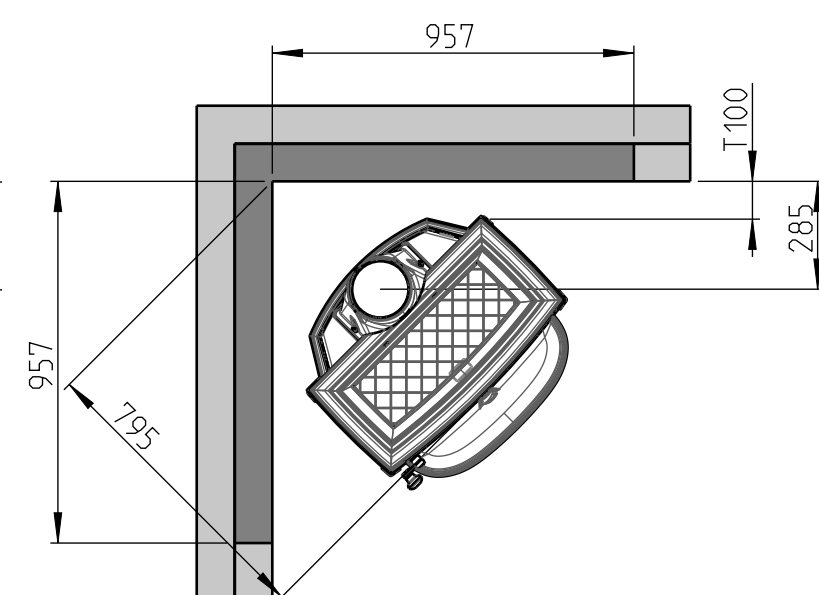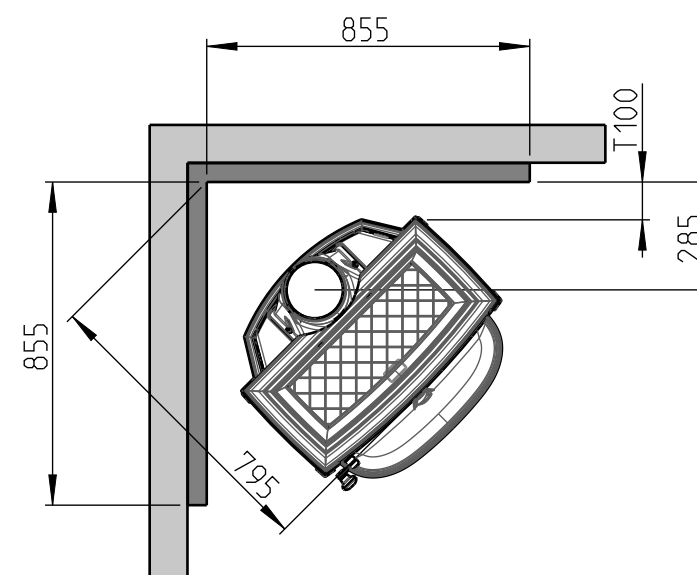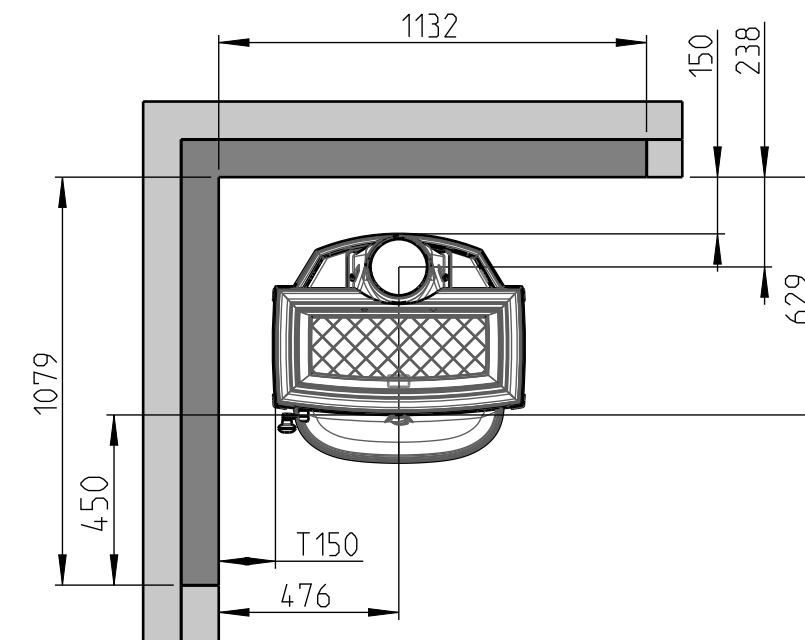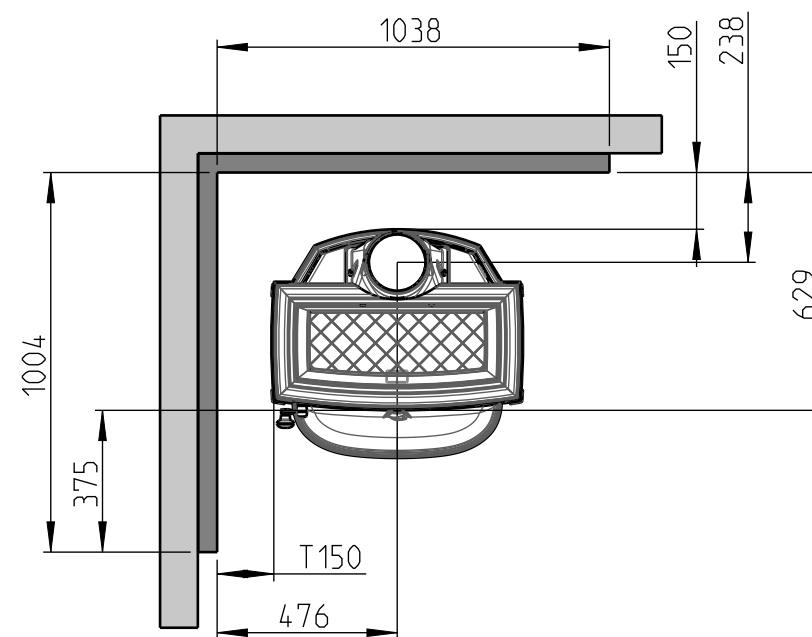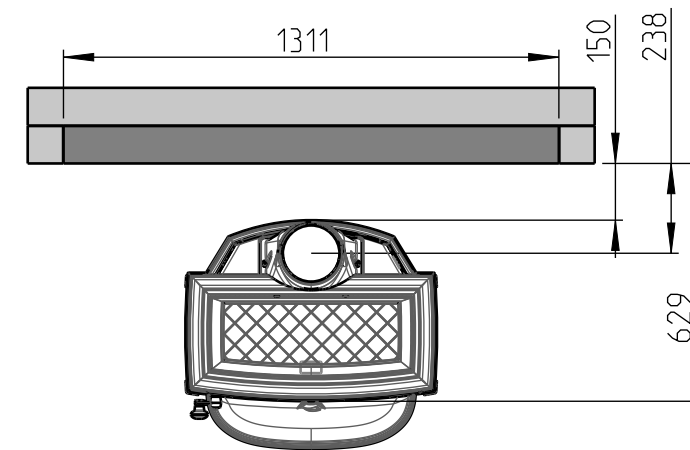

Combustible wall

Firewall (See chapter 3.3 in the manual)